


RDS Toolbox Lid & Lock Maintenance


Spray a small amount of WD40 on the locations shown below, every 3 months.

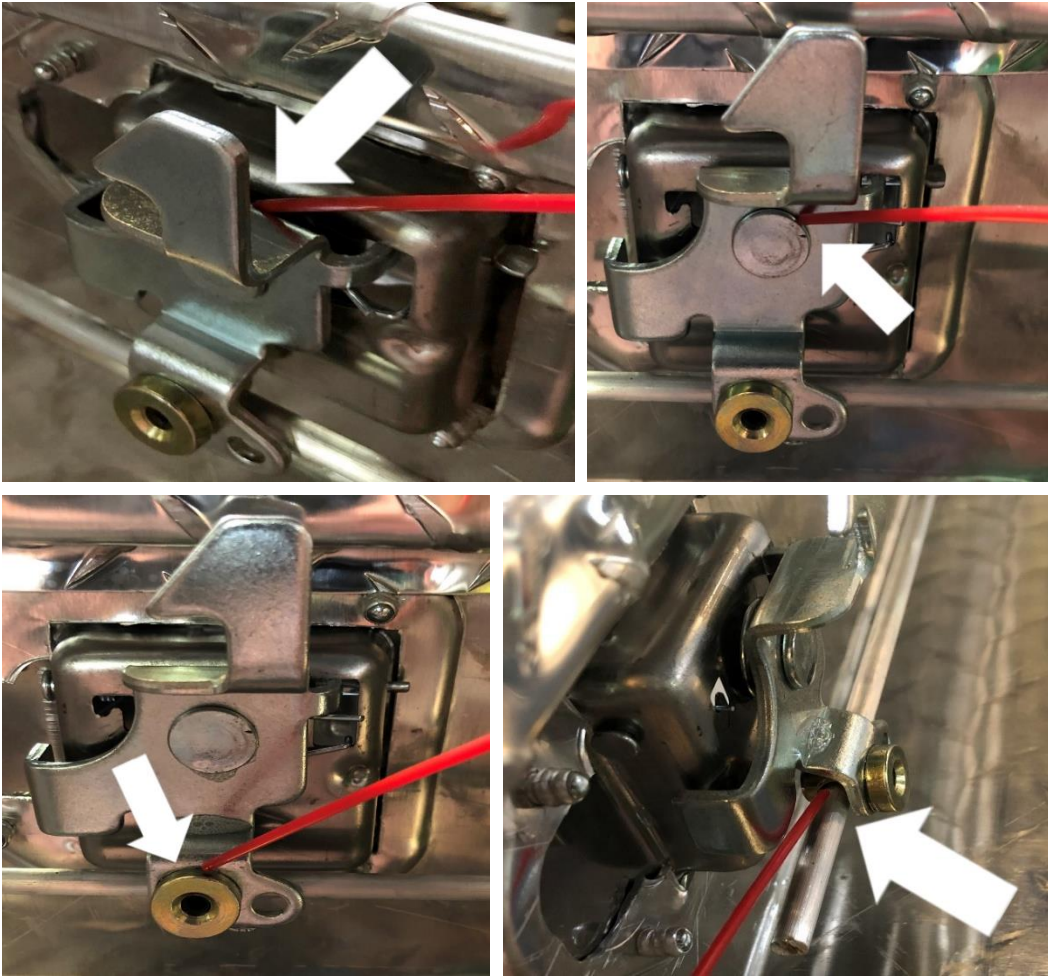

To adjust the lid for proper closing, use the following fixes.

The starting alignment for the striker pin is seen below. Use a square to mark the center of the paddle lock, and the lid lip above the paddle lock.

If the lid is loose, move the striker pin up to tighten. If the lid is too tight, move the striker pin down to loosen.

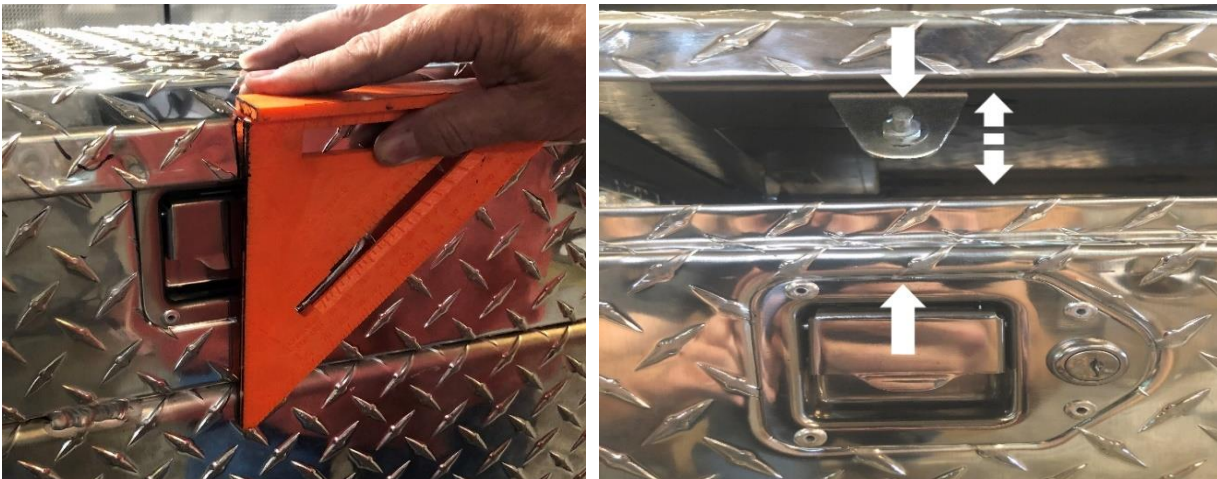

If the striker pin is not catching in the lock, the pin needs to move left. If the striker pin is hitting the lock too much, the pin needs to move right. Move the striker pin in 1/8" increments as needed. Move the striker pin left and right by loosening the 2 nuts shown below.



If the striker pin seems to be too long, it can be trimmed off. Cut in 1/8" increments to make sure you do not take too much. Also, if the angle bracket has been bent, it can be tapped back straight using a rubber mallet.



If the lid needs to be leveled, check the straightness of the lid as in the picture below. If a lid corner/side needs to come down, place a rubber mallet in the opposite corner. Then gently pull down on the corner to level the lid.



If the box gets bent from the outside, it can be tapped back out and straightened, using a rubber mallet. Hit the inside lip to force the box back out.

